

Tech Brief

Part Number: 9010080



Figure 1



Figure 2



Figure 3



Figure 4

1. A foam firewall seal has been included with your new heater (see Figure 1). When installing the heater into the vehicle, remove paper backing from the foam firewall seal so that it can adhere to the firewall.
2. Use the original tank brackets to fasten the heater to the plastic heater case (see Figure 2). The top tank bracket should be located below the inlet and outlet pipes (see Figure 3).
3. Use the foam strip that was included with your new heater to seal off the sides of the heater (see Figure 4). Duct tape and foam are some of the best materials to use to prevent cold air by-pass around a heater.
4. Your new heater is a high efficiency aluminum heater core with a high fin count of 30 fins per inch. The original copper-brass unit only has 13 fins per inch.