


Tech Brief

Part Number: 9010510

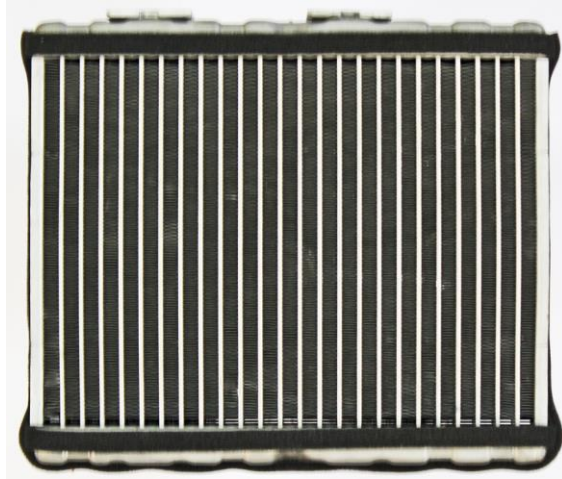

1. Remove the original heater from the vehicle, loosen and completely remove the 4 screws which attach each pipe to the original heater core.
2. Remove gaskets and pipes from the original heater and set aside.
3. Fasten the screws, pipes, and gaskets from the original heater to your new heater. The pipes should be oriented on the new heater so that they are in the same configuration as on the original.
4. Your new heater can now be installed in the vehicle.